


Notice

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

Trademarks and Permissions



HUAWEI and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, products, services and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

1 Introduction

About This Guide

This guide describes how to use your phone.

All the images in this guide are provided as a reference. The actual appearance and display depends on the phone that has been delivered.

Frequency Band

Your phone can operate where cellular coverage exists, automatically switching between WCDMA/HSDPA 1700/2100 MHz AWS (Band IV), 2100 MHz (Band I), and GSM/GPRS/EDGE 850/900/1800/1900 MHz networks.

Packing List

The product package includes the following items.

- One HUAWEI U7519 mobile phone
- One Lithium Ion(Li-Ion) battery
- One battery charger
- One USB cable
- One Quick Start Guide
- One headset (Optional)

SIM Card and Memory Card

Insert your SIM card before using your phone. Remove the SIM card and the battery only after turning off your phone. To use the SIM card properly, please read the following instructions carefully.

 
NOTE:

- *Keep the SIM card out of the reach of children.*
- *The SIM card and its metal contacts can be easily damaged by scratching or bending. Be careful when you carry, insert or remove the SIM card.*
- *Always disconnect the charger from the phone before inserting or removing the SIM card.*

Your phone supports a memory card (microSD) with a capacity of up to 8 GB.

To insert or remove the memory card, you must remove the battery cover.

Follow these steps to install of the SIM card and memory card.

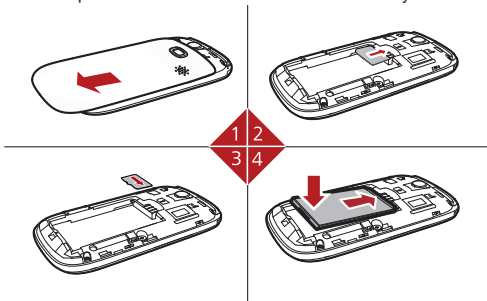

1 Remove the battery cover.

2 Insert the SIM card.

3 (Optional) Insert the memory card.

4 Insert the battery.

Charging the Battery

NOTE:

 
- *The battery loses its charge even when it is not being used. If you have not used your phone for a long time, you should recharge it first.*
- *The battery can be recharged but eventually it will wear out again. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.*

 
»» Introduction

- *The time it takes to charge your phone depends on the environmental temperature and the age of the battery.*
- *When the battery charge is very low, the phone sounds a warning tone and a prompt will appear on the display screen. When the battery charge is too low, the phone will turn off automatically.*

Before charging the battery, ensure that the battery has been properly inserted into your phone. To charge the battery, first plug in the charger connector to a power socket, and then insert the plug of the cable into the connector of the phone as shown in the following figure. The figure is for reference only. The actual appearance is subject to your mobile phone and accessories delivered.

1. Plug in the phone charger into a power outlet.
2. Plug the charger into your phone's charger jack. When the battery is being charged, the battery icon blinks continuously.
3. When the battery icon stops blinking, it means that the battery is full. Disconnect the charger from the power outlet.
4. Unplug the charger from the phone.

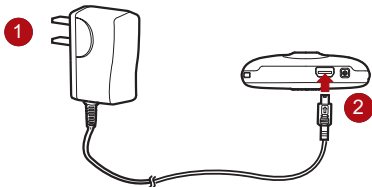

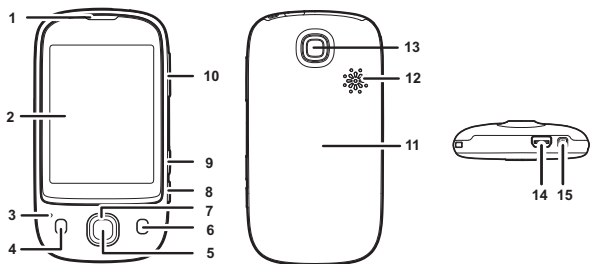
Appearance of Your Phone









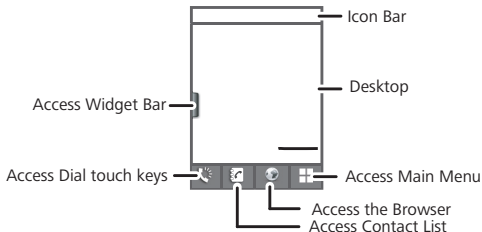 





1	Earpiece	2	Touchscreen	3	Microphone
4	SEND Key	5	OK Key	6	END Key
7	Navigation Key	8	Camera Key	9	Lock Key
10	Volume Up/Down Key	11	Battery Cover	12	Speaker
13	Camera	14	Charger/USB/Headset Port	15	POWER Key

»» Introduction

SEND Key	<ul style="list-style-type: none">Place or answer calls.Access the Calls Screen in standby mode.
OK Key	Confirm a selection.
END Key	<ul style="list-style-type: none">End a call or reject an incoming call.Return to the idle screen.
Camera Key	Activate the camera in standby mode when the screen is not locked.
Lock Key	Press to lock/unlock the phone.
POWER Key	Press and hold to turn phone on or off.

Home Screen



	The phone is currently in the HSDPA network.		The phone is currently in the GSM network. When “E” is in red, it indicates in EDGE/GPRS network.
	The phone is currently in the WCDMA network.		Handset is roaming.
	A call is in progress.		An alarm is set.
	Bluetooth is enabled.		Bluetooth is connected.
	You have a new text message waiting.		You have a new multimedia message waiting.
	The headset is connected.		Memory card is inserted.
	Displays current battery strength.		You have a new voice message waiting.

Using the Touchscreen

You can select an item or enter text by tapping the touchscreen with your finger.

NOTE:

- *Tap properly on the icon to select it.*
- *To protect your touchscreen, tap gently.*
- *When the screen is locked, press the lock key to unlock the touchscreen.*
- *When the screen is locked, press the send key, the OK key or the end key to activate the screen. To unlock the screen, press and hold the icon according to the instructions on the screen.*

Calibrating the Touchscreen

If your phone does not respond to your touch requests correctly, calibrate the screen as follows.

1. Select **Settings> Touch settings> Calibrate** to access the screen for calibration.
2. To calibrate the screen, tap the centre of the calibration frame on the screen according to the instructions.

NOTE: *During the calibration, tap the center of the calibration frame properly to ensure that the phone responds correctly to your tapping and text entry after the calibration.*

Dragging and Flicking

You can perform the following operations by dragging your finger on the touchscreen.

- On the home screen, tap and drag the profile to change its position on the screen.
- On the home screen, tap and drag the widgets to change their position on the screen.
- In the menu list, drag up or down to scroll. To select a submenu, tap it.
- When viewing pictures, flick right or left to change the order of the pictures.



Accessing the Widget Bar

The widget bar provides quick access to the most frequently used items.

1. Tap the widget bar tab located on the left side of the home screen to open it.
2. To open an item on the widget bar, tap it.
3. Tap the widget bar tab to close it again.


NOTE: *You can drag a widget to the screen or drag it back to the widget bar.*

Making a Call Using the Keypad

1. On home screen, tap  to open the dial touch keys.
2. Enter the phone number using the dial touch keys. If you enter a wrong digit, you can tap  to erase it.
3. To make a call, perform one of the following operations:
 - By pressing the send key.
 - By Selecting **Options** > **Call**.
4. Press the end key to terminate a call.

NOTE: To perform other operations during a call, select them from the option list under **Options**.

Sending a Message

1. To create a message, select **Messages** > **Create message** .
2. When editing a message, tap the icons at the bottom of the screen to insert pictures or other files.
3. After the message is completed, tap  or press the OK key. You can add a recipient by either selecting **Add from contacts**, **New number** or **Enter E-mail**.
4. Select **Send** to send the message.

2 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use your device safely. Read this information carefully before using your device.

Electronic Device

Turn off your device if using it is proscribed. Do not use the device if it will cause danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using it is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, you should use the ear opposite the pacemaker and you should not carry the device in your breast pocket.

Potentially Explosive Atmosphere

Turn off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle's engine. Triggering sparks in such areas could cause an explosion or a fire, resulting in bodily injuries and even death. Do not turn on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage and distribution areas and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress.

»» Warnings and Precautions

Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations may include: below deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations regarding the use of the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on your device while driving. Use hands-free accessories.
- When you have to place or answer a call, park the vehicle on the side of the road before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in its deployment area. Otherwise, the device may hurt you when the airbag inflates with a strong force.
- Do not use your device while flying. Turn off your device before boarding an aircraft. Using a wireless device in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not made with metal components. As mentioned above, keep your device 1.5 cm away from your body.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and increases your power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C when the device is being charged. Keep the ambient temperature between -10°C to 55°C when the device is powered by a battery.

Prevention of Hearing Damage

Using a headset at a high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

»» Warnings and Precautions

Safety of Children

Comply with all precautions with regard to the safety of children. Letting the child play with your device or its accessories, which can include detachable parts, can be dangerous, as a small child could choke on them. Ensure that small children are kept away from the device and accessories.

Accessories

Use only manufacturer-approved accessories. Using accessories made by other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the power outlet and the device when you are not using it.
- The battery can be charged and lose its charge hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or your charger to malfunction.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery could be short-circuited and cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or

splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.

- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with wet hands. Otherwise, it may lead to a short circuit, a device malfunction, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. The magnetism of the device may erase the data stored in them.
- Do not leave your device, battery and charger in a place with an extremely high or low temperature. Otherwise, they may not function properly and it could lead to a fire or an explosion. When the temperature is lower than 0°C, the battery's performance is affected.

»» Warnings and Precautions

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, turn off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories will become invalid and the manufacturer will not be liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.09 W/kg, and when properly worn on the body is 0.687W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

»» Warnings and Precautions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133/RSS 132/RSS 102. This phone complies with the Class B limits for radio noise emissions as set out in the interference-causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

V100R001_01 31010DDR