

# WI-FI ROUTER QUICK SETUP GUIDE

---

WI-FI ROUTER



A Quebecor Media Company

# WI-FI ROUTER DIR-825/VTR DUAL-N BAND



**EXCLUSIVE TO VIDEOTRON INTERNET CUSTOMERS**  
TECHNICAL SUPPORT, CONFIGURATION AND REMOTE  
DIAGNOSIS AVAILABLE 24 HOURS A DAY, 7 DAYS A WEEK.\*

**CUSTOMER SERVICE**  
1-888-433-6876

**BUSINESS SERVICE**  
1-800-561-4248

VISIT OUR FAQ SECTION AT [VIDEOTRON.COM](http://VIDEOTRON.COM)

## **BOX CONTENTS**



- Router
- 2 antennas
- Ethernet cable
- Power connector
- Quick start guide

\* For more information about Wi-Fi router support, visit [www.videotron.com/wifi-router/support](http://www.videotron.com/wifi-router/support)

# INSTALLATION

---

- Disconnect the power supply from the cable modem (**A**).
- If there is a computer already connected to the cable modem, disconnect it.
- Use an Ethernet cable to connect the cable modem (**B**) to the grey port at the back of the router labelled Internet (**D**).
- Use another Ethernet cable to connect the network port on the computer to the first blue port at the back of the router labelled **LAN (C)**.
- Plug in the cable modem's power supply cord (**A**).
- Connect the power supply unit to the **POWER** terminal at the back of the router (**E**), then plug the power supply unit into an electrical outlet.
- Wait until the Earth icon on the front of the router is lit or flashes blue.
- If there is a reset button on the modem, press it.
- Start the computer and open the browser.

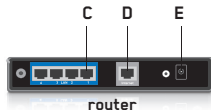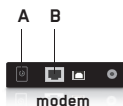

# WI-FI WIRELESS CONFIGURATION

To get the best wireless coverage, place your router in an open area away from your computer, monitor, and speakers. When the router is positioned, use the reference diagram below to adjust your antennas. Since each house is different, you may need to try several different antenna configurations to get the best coverage.

## HORIZONTAL



front view

## VERTICAL



front view

Use one of the following antenna configurations for optimal wireless performance.

- On your computer, launch the Wireless Network Wizard.
- Choose one of the two Wi-Fi networks indicated under the router, usually « VideotronXXXX » (2.4GHz) or « VideotronXXXX\_Media » (5GHz).
- The Wireless Network Wizard will prompt you for the network key. Enter the network key exactly as it is printed under the router.
- Repeat this process for every Wi-Fi computer or device that you want to connect to the Internet.

Need help? Call us at 1-888-433-6876, 24 hours a day, 7 days a week. For further information, go to our online support section at [support.videotron.com](http://support.videotron.com).